 




1
YEAR
WARRANTY

12VDC PORTABLE OVEN with Tray and Racks Owner's Manual

 
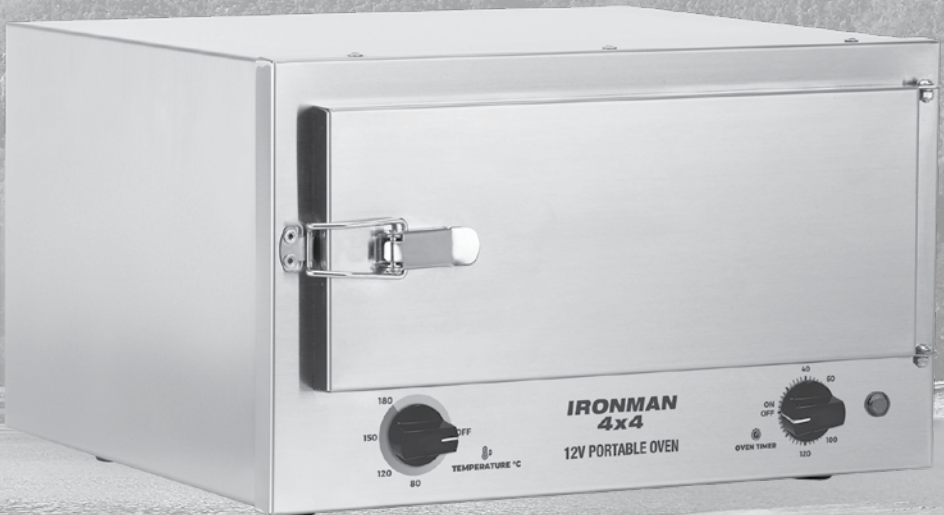 


IOVEN0012

IMPORTANT: Please read all procedures and precautions before using the Ironman 4x4 12VDC Portable Oven. If you have any questions please contact our customer service department.

Inclusions and Features

1.

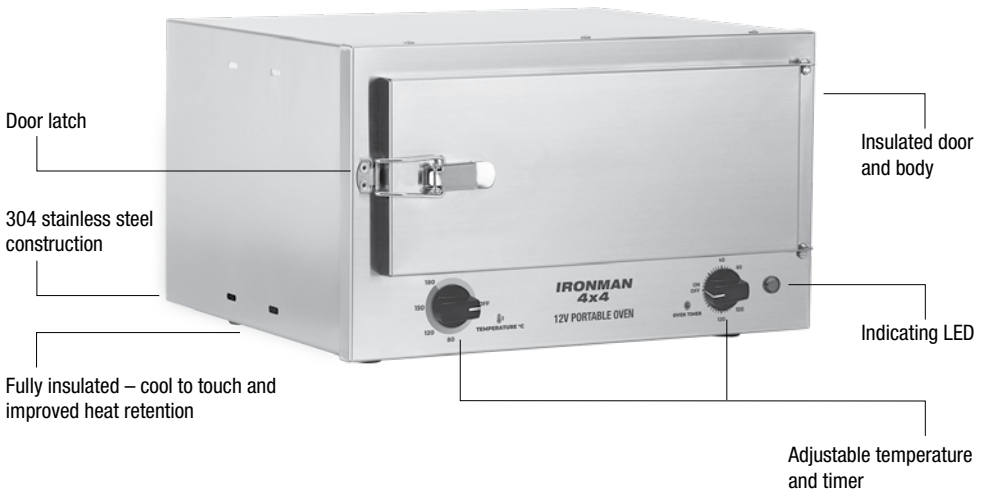

2.



3.



4.



5.

1. Oven
2. Wire racks x 2
3. Stainless steel baking tray x 1
4. Mounting brackets x 2
5. Cigarette lighter adaptor



Setup and Operation

IMPORTANT: It is recommended that before connecting your oven that the connection point to be used will provide the correct Voltage and Amperage that the oven will require for correct operation.

The Portable Oven is easily connected to a suitable 12-volt power source directly using the fused 50A Anderson plug connector attached to the oven or with the cigarette lighter adapter.

To ensure that the oven is stable during transportation or installations please use the two (2) brackets supplied to enable the unit to be secured to a solid surface in your vehicle.

Operating Instructions

1. Preheat the oven to the desired temperature before inserting the food. The maximum temperature that can be achieved is 180°C and you may need to allow up to 90 mins to reach this temperature.
2. Select if the Racks or Baking Tray is required, install, and then fill with the food, taking care not to overload the oven.
3. Once the required temperature has been reached, set the oven timer to the desired cooking time.
4. It is recommended to check the food occasionally and rotate / turn when necessary.
5. When food is cooked, remove contents from oven and turn off.

Oven Timer

1. Rotate the timer clockwise to set to desired cooking time. Range between 1-120 minutes.
2. Timer will emit an audible noise when the set time has been reached.
3. To turn off the timer earlier, rotate anticlockwise to the "OFF" position

Indicating LED

There is a small indicating LED that will be illuminated until the set temperature is reached at that time it will then extinguish.

If the temperature is adjusted above the original setting, below 180 degrees the indicating LED will illuminate and then extinguish when the updated temperature has been reached.

Oven Door

The Portable Oven features an insulated door with a latch that allows the door to be securely closed providing superior heat retention. During operation this latch may become HOT so please ensure appropriate safety precautions are taken.

Oven Use

It is important that the oven is not overloaded as this will extend cooking times.

Food may be placed directly on the racks or in the baking tray, to assist with clean-up it is recommended to use aluminium foil or non-stick surface sprays on the racks and tray.

Do not place food directly on the base of the oven unless it is insulated with a tray or foil to reduce the risk of burning.

Cleaning

DO NOT IMMERSE OVEN IN WATER

Clean all surfaces with specific Kitchen Cleaning liquids and sprays, take care with use around the controls and connections.

Specifications



WARNING: To reduce the risk of injury please remember that this is a portable oven, and its surfaces, racks, trays and handles may be hot when in use and immediately after use. Take care when handling.

CONSTRUCTION	
External Material	304 Stainless Steel / Thickness 0.8mm
Internal Material	304 Stainless Steel / Thickness 0.8mm
Insulating Material	Ceramic Fiber / Thickness 25mm
Tray Material	304 Stainless Steel / 0.8mm
DIMENSIONS - EXTERNAL	
Dimensions	320 X 290 X 200mm
Product Weight - Incl shelves	6kg
DIMENSIONS - INTERNAL	
Dimensions	268 X 252 X 98mm
ELECTRICAL	
Voltage & Max Amperage	12V / 10.8A
Max Wattage	130W
Cable Size	2 X 1.5mm ² Twin Core
Fuse Type and Rating	Auto Fuse - 15A Rating
Main Connection	50A Anderson Plug
Adapter	10A Cigarette Plug / 50A Anderson Plug
PERFORMANCE SPECIFICATIONS	
Max Temperature	180 Degrees
Timer	120 Mins - Manual With Indicating Bell

IOVEN0012/070921