


ILANTERNOO4 Rechargeable LED Lantern and Bug Zapper Owners Guide

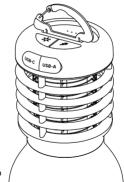



www.lronman4x4.com www.lronman4x4america.com

IMPORTANT: Please read all procedures and precautions before using the Ironman 4x4 LED Lantern. If you have any questions please contact our customer service department.

• Operating Steps



Lighting- Brightness Level

- 1. Press the ": c" button once for LOW brightness
- 2. Press the "* button twice for MED brightness
- 3. Press the " : ¢: " button three times for HIGH brightness
- 4. Press the ": c button four times to turn OFF

Bug Zapper

- 1. Press the " **F** " button once to turn ON
- 2. Press the "f" button again to turn OFF

3. Charging / Power Supply

Open the silicone protective cover of the charging interface and connect to a suitable charging source

Battery Indicator




000 0%-5%

Notice: ". is on

• Warning

- · Do not look directly in to the LED this may cause eye damage
- · Do not leave the product unattended when in use
- · Fully charge battery before use
- · Recharge the battery with DC outputs of 5V / 2A Only
- · Before use ensure there are no broken or worn parts
- · Do not attempt to disassemble or modify the product

Features

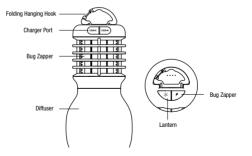

Specifications

CONSTRUCTION

External - Body	ABS+PC
External - Diffuser	Silicone
Internal - Zapper	Stainless Steel
DIMENSIONS	
Assembled	95 x 95 x 200mm
Folded	98 x 98 x 100mm
POWER	
Input - Volts / Amps	5V @ 2A
Output - Volts / Amps	5V @ 2A
Charge time to 100%	2.5Hr
Battery Type:	Li-Ion 3,400mAh / 3.7V
Input:	Type-C 5V/2A (Max)
Output:	USB-2 5V/2A (Max)
Run Time:	
- LED Light Only	3.6Hr High / 5.3Hr Med / 11.5Hr Low
- Zapper Func. Only	38Hr
- Light & Zapper Func.	3.1 Hr
LED:	3W
Power Grid Voltage:	300V-1000V