



INSTALLATION GUIDE

Part Number 1198K

Front Sway Bar Spacer Kit

15mm Thickness with Forward Shift

Toyota Hilux 2005 - 2015

Toyota Prado 120/150 (Without KDSS)

Allow 20 - 30 Mins Installation Time.

This kit is intended to increase clearance between sway bar and strut spring seat.

1. Raise vehicle with wheels hanging, ensure the vehicle is supported with suitable jacks / hoist and vehicle stands.
2. Remove both original bolts from the sway bar D-Bracket, both sides of vehicle (Fig 1).
3. Position spacer under chassis as shown (Fig 2) aligning the relevant counterbore holes with the threaded holes in chassis. (Refer Diagram Below)

The spacer plates contain more holes than required to provide compatibility with other vehicle models. Only one pair of holes is used.

4. Install newly supplied cap head bolts using a small amount of thread locking compound.

Tension bolts to 70Nm.

Use thread locking compound

DO NOT OVERTIGHTEN

5. Using newly supplied hex bolts and flat washers, install D-bracket onto threaded holes nearest to the utilised cap head bolts (Fig 4).

Tension bolts to 70Nm.

Use thread locking compound

DO NOT OVERTIGHTEN

6. Check all fasteners for tension and surrounding components for clearance.
7. Test drive vehicle.

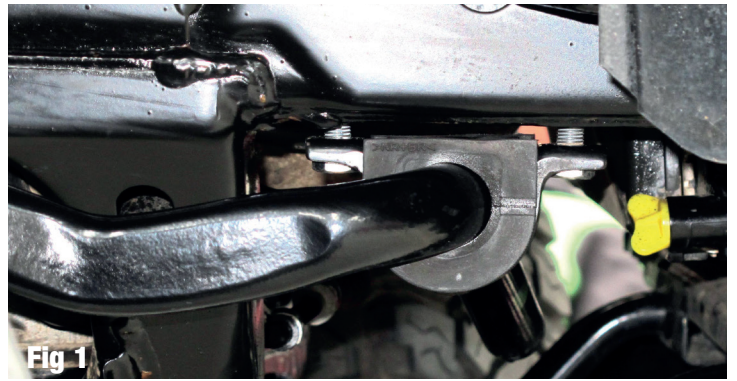


Fig 1

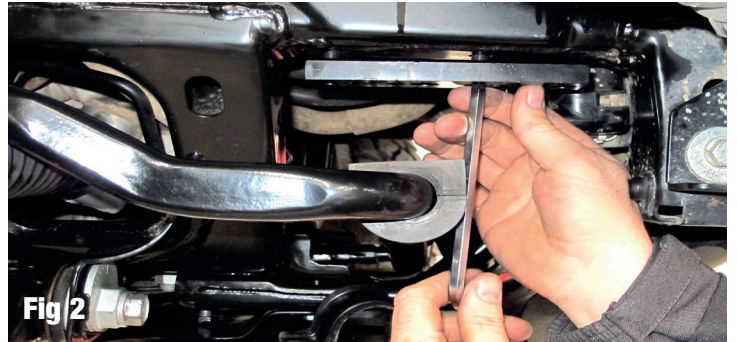


Fig 2


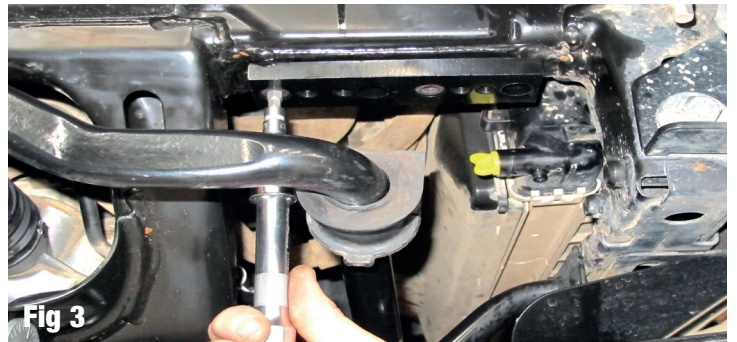


Fig 3



Fig 4

Hilux 76mm

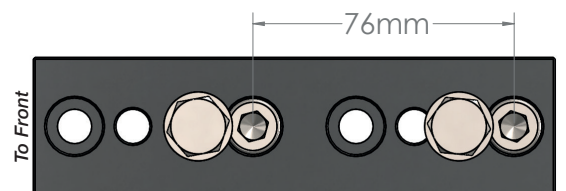

Prado 82mm

